




Altronix[®]

PMK1 - Pole Mount Installation


Step 1:

Thread wormgear clamp through upper bracket and mount at desired height.

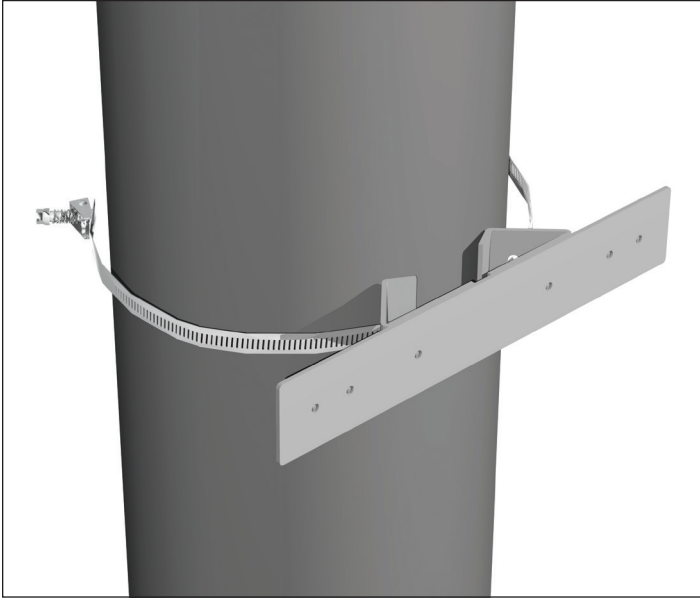

Step 2:

Attach bottom bracket to enclosure using stainless steel bolts and lock washers (included).

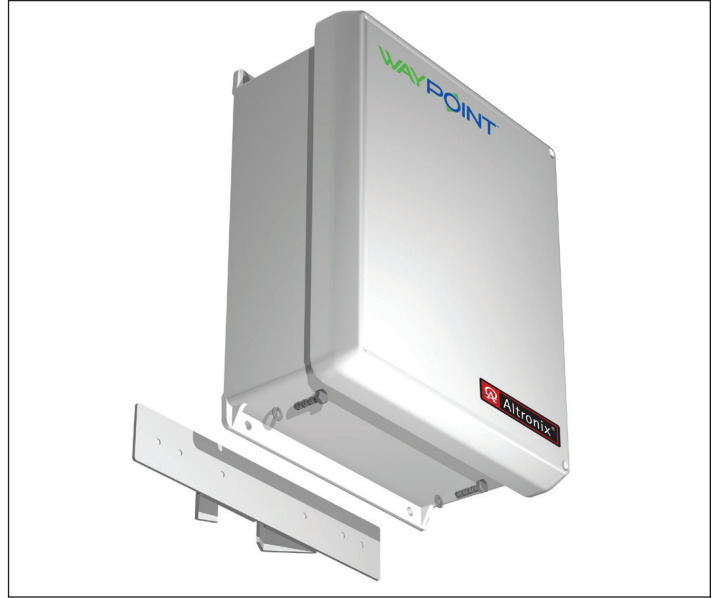

Step 3:

Thread second wormgear clamp through slots on lower bracket.



Step 4:

Attach enclosure to upper bracket (already mounted) using stainless steel bolts and lock washers (included). Secure lower bracket to pole with wormgear clamp.

